

# **F800TO WIRELESS FINGERPRINT MODULE** INSTRUCTION MANUAL

# **ACCESSORIES**

Wireless Fingerprint Module






433.92 Mhz

F800 Wireless relay



12V

433.92 Mhz

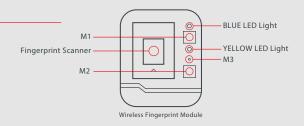

#### REGISTER FINGERPRINTS

Admin user (1st user) fingerprint

- 1. Press M1 button. The YELLOW light turns on.
- 2. Place the desired finger within 20 seconds on the fingerprint reader for 3 to 5 seconds until you see a flash of GREEN light. Then, the YELLOW light
- 3. Lift the admin finger.
- 4. Repeat step 2 & 3 again for 5 times.

After repeating step 2 & 3 for the 5th time, BLUE Light will flash once indicating a successful set up for the admin fingerprint ID.



Any incorrect procedures will be indicated by RED light flashes twice.

( > ) 2<sup>nd</sup> user fingerprint

- 1. Press M1 button. The YELLOW light turns on.
- 2. Place the admin finger (1st ID) on the fingerprint reader until you see a flash of GREEN light. Then, the YELLOW light will turn on.
- 3. Lift the admin finger.
- 4. Place the user finger on the fingerprint reader until you see a flash of GREEN light. Then, the YELLOW light will turn on.
- 5. Lift the user finger.
- 6. Repeat step 4 & 5 again for 5 times with the same user finger.

After repeating step 4 & 5 for the 5th time, BLUE Light will flash twice indicating a successful set up for the user fingerprint ID.

( > ) 3<sup>rd</sup> to 8<sup>th</sup> user fingerprint

- 1. Press M1 button. The YELLOW light turns on.
- 2. Place the admin finger (1st ID) on until you see a flash of GREEN light. Then, the YELLOW light will turn on.
- 3. Lift the admin finger.
- 4. Place the user finger on until you see a flash of GREEN light. Then, the YELLOW light will turn on.
- 5. Lift the user finger.
- 6. Repeat step 4 & 5 again for 5 times with the same user finger.

After repeating step 4 & 5 for the 5th time, BLUE Light will flash

- 3 times for the 3rd user
- 4 times for the 4th user
- 5 times for the 5<sup>th</sup> user
- 6 times for the 6th user
- 7 times for the 7<sup>th</sup> user - 8 times for the 8th user

#### **HOW THE SYSTEM WORKS**

- 1. Turn key switch to ACC/ACCESSORY position.
- 2. Place the authorized fingerprint on reader for 1 to 2 seconds.
- 3. If the GREEN light flashes twice, the system will send wireless code to disarm.
- 4. Now you can start the vehicle engine (ON/RUN) position.

If RED light flashes twice, it means an unauthorized fingerprint has been placed or you placed the wrong fingerprint.

# DELETE 2<sup>ND</sup> TO 8<sup>TH</sup> FINGERPRINT ID

- 1. Press & hold button (reset) M3 for about 3 seconds until the YELLOW light turns on.
- 2. Place the admin fingerprint until you see the GREEN light flashes twice. Then, the YELLOW turns on.
- 3. Press & hold button M2 until the BLUE light flashes:
- 2 times for the 2<sup>nd</sup> user then release M2
- 3 times for the 3rd user then release M2
- 4 times for the 4th user then release M2 - 5 times for the 5th user then release M2
- 6 times for the 6th user then release M2
- 7 times for the 7th user then release M2 - 8 times for the 8th user then release M2

4. Press M3 once to delete the user in 3 seconds.

If Red LED light flashes means there is no user in a particular ID or the user is already deleted. You can't delete the admin user in this mode.

## **VALET MODE**



Enter Valet Mode

- 1. Press & hold M1+M2 for 3 seconds until the YELLOW light turns on.
- 2. Place any authorized fingerprints on the reader unit the GREEN light flashes twice then the BLUE light will start flashing indicating VALET MODE is active.

#### > Fxit Valet Mode

- 1. Press & hold M1+M2 for 3 seconds until the YELLOW light turns On.
- 2. Place any authorized fingerprints on the reader unit you see GREEN light flashing twice then the BLUE light will stop flashing.

Now, standby mode is activated, a fingerprint is required to start the engine again.

## **DELETE ALL FINGERPRINTS**

The Default PIN CODE is (3, 6). Meaning the BLUE lights has to flash 3 times in the first sequence and 6 times in the second sequence.

- 1. Press & hold M2 for 5 seconds until YELLOW turns on.
- 2. Enter PIN CODE, Default (3, 6)
- 1. Press & hold M2 until BLUE light flashes 3 times then relaese M2.
- 2. Press & hold M2 until BLUE light flashes 6 times then relaese M2.

You will see a flash of green light after a successful entry of PIN CODE.

## SET UP NEW PIN CODE

- 1. Press & hold M1 for 5 seconds until YELLOW turns on.
- 2. Enter PIN CODE, Default (3, 6)
- 1. Press & hold M2 until BLUE light flashes 3 times then relaese M2.
- 2. Press & hold M2 until BLUE light flashes 6 times then relaese M2.

You will see a flash of green light after a successful entry of the PIN CODE.

- 3. Enter NEW PIN CODE, for example (2, 5)
- 2. Press & hold M2 until BLUE light flashes 5 times then relaese M2.

# **REST TO DEFAULT PIN CODE**

- 1. Press & hold M1 until the YELLOW light turns on.
- 2. Place the admin fingerprint on the reader within 20 seconds for 6 to 7 seconds. GREEN Light will flash twice.

Now, the PIN CODE is reset to (3, 6)